

Safety

Drivetrain:

Moving parts –The drivetrain has many rotating parts operating at very high speed; therefore, it is imperative to keep all limbs and loose clothing clear while in operation. When maintenance on the drivetrain must be performed, BRUTUS 2014 must be disabled from starting before work can begin.

Disconnect Battery – To immobilize BRUTUS 2014 the negative battery terminal must be disconnected from the circuit. Only then is BRUTUS 2014 completely immobilized and safe to work on the drivetrain.

Pinch Point – Several pinch points exist of BRUTUS 2014 drivetrain. To avoid injury keep limbs clear while BRUTUS 2014 is in operation and proceed with caution while performing maintenance.