

OIL CHANGE & OIL FILTER REPLACEMENT

Changing Oil



Change oil after first 5 to 8 hours of use, then every 100 hours. Change oil every 50 hours when operating the engine under heavy load or in high temperatures.

1. Place engine level.
2. Disconnect spark plug wire and keep it away from spark plugs. Disconnect battery at negative terminal.
3. With engine OFF but still warm, remove oil drain plug and drain oil into appropriate receptacle. Reinstall drain plug.
4. Remove oil filter. Before installing new filter lightly oil filter gasket with fresh, clean oil.
5. Screw filter on by hand until gasket contacts oil filter adapter. Tighten 1/2 to 3/4 turn more.
6. Follow *Adding Oil* to add fresh oil.
7. OIL FILLING PROCEDURE: Add 1 quart (32 ounces or 1 liter). Start and run engine at idle for 30 seconds. Shut engine off and wait 30 seconds. Then add more oil slowly to bring level to FULL mark on dipstick. Do not overfill.

Note: Engine holds approximately 2.5 quarts (80 ounces or 2.3 liters) when changing oil and oil filter.

Adding Oil

1. First add 67 oz (2 liters).
2. Start and run engine at idle for 30 seconds. *See starting instructions.*
3. Shut engine off and wait 30 seconds.
4. Then add more oil slowly to bring level to FULL mark on dipstick. **DO NOT OVERFILL.**

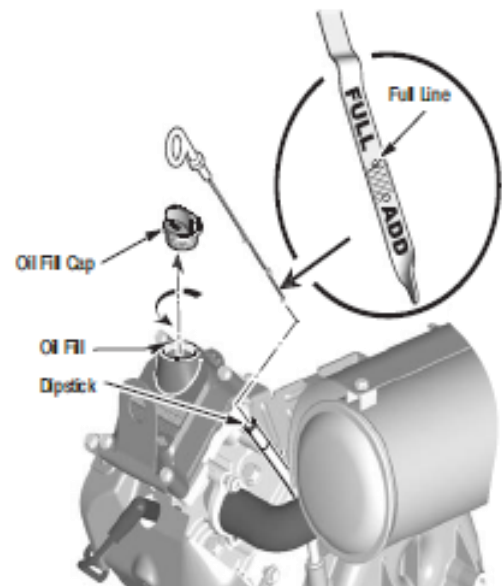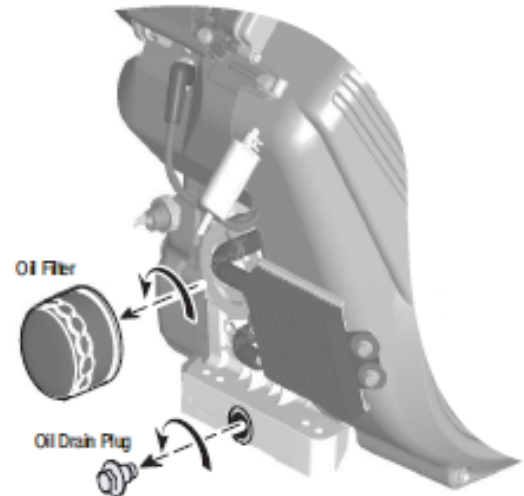

CAUTION



Used oil is a hazardous waste product. Dispose of used oil properly. Do not discard with household waste. Check with your local authorities, service